



©2008 Yamaha Corporation. All rights reserved.

Guide Mode Practice for Clavinova CVP300 Series

Rhythm

1. Select a song.
2. Press the DIRECT ACCESS button, then the GUIDE button on upper left panel.
3. Press button A or B in the center display area to select ANY KEY.
4. Press the GUIDE button, then the SCORE button.
5. Select a part to practice by turning off the TRACK1/RIGHT or TRACK2/LEFT buttons on the panel. (To practice both parts, turn off both buttons). A button is off when the green light is not lit.
6. Press PLAY/PAUSE to begin the song.
7. Watch the screen display and tap the rhythm of the part on any key, making sure to keep the “ball” bouncing rhythmically. If the ball starts/stops, rhythm is off. If no sound is produced, you are too far ahead of the note.

Note

1. Select a song.
2. Press DIRECT ACCESS, then GUIDE.
3. Press button A or B in the center display area to select FOLLOW LIGHTS.
4. Press button C in the center display area and set GUIDE LAMPS OFF.
5. Press the GUIDE button, then the SCORE button.
6. Select a part to practice by turning off the TRACK1/RIGHT or TRACK2/LEFT buttons on the panel. (To practice both parts, turn off both buttons).
7. Press PLAY/PAUSE to begin the song.
8. If you miss a note, the file will stop playing. By looking at the screen, you can see which note you missed. Also, if you watch the screen as you play, the ball indicates if you are playing rhythmically.

Rhythm and Note

1. Repeat steps 1-3 from “Note” above.
2. Use button C in the center display area and set GUIDE LAMPS ON.
3. Repeat steps 5-7
4. If you play with inaccurate rhythm, the lights behind the keys will flash. If you miss a note, the light will be steady, indicating which note you missed. If you play too far off rhythm, no sound will be heard.