



©2008 Yamaha Corporation. All rights reserved.

Voice Selection on Clavinova CVP300 Series

If you select a voice and can't hear it when you play the keys, press the PIANO RESET button in the lower right section of the center display and follow the directions below:

Basic Operation

1. Select a type of instrument you'd like to play and press its button in the Voice section (at the top of the right panel).
2. Look at the center display. Choose a voice by pressing the button (A-J) next to instrument desired.
3. To select another Clavinova voice, repeat the process.

If you want more choices, spin the dial and watch the screen. A small box will appear around the instrument names as you spin the dial. Once the box is around the instrument desired, press the ENTER button just below the dial to highlight the box.

Select XG or GM Voices

1. Select a type of instrument you'd like to play and press its button in the Voice section.
2. Look at the center display. Choose a voice by pressing the button next to instrument desired.
3. Press button 8▲ located at bottom of the display area (below the icon of a folder with an up arrow).
4. Spin the dial to place the box around XG GM.
5. Press ENTER.
6. Spin the dial to place the box around the instrument category desired.
7. Press ENTER.
8. Spin the dial to place the box around the instrument desired.
9. Press ENTER to highlight the instrument.