



©2008 Yamaha Corporation. All rights reserved.

Basic Recording on Clavinova CVP400 Series



Quick Single-Pass Recording

1. For a new song, press the REC and STOP buttons simultaneously.
2. Select a voice and all other items to record (accompaniment, split, etc).
3. Press the REC button and play your song.
4. Press STOP when you're finished recording.
5. Press PLAY/PAUSE to playback what was recorded.

Multi-Part/Multi-Track Recording

1. For new song, press REC and STOP simultaneously.
2. Press the DIRECT ACCESS then METRONOME buttons to set the time signature of the song.
3. Set the tempo for the song by using the TEMPO +/- buttons on the panel.
4. Select a voice to be recorded.
5. Press and hold REC, then look at bottom of display and press the ▲ and ▼ (up and down arrows) of the part number you want to record, then release both buttons.
6. Turn on the METRONOME (adjust the tempo, if desired).
7. If the first note occurs on count 1, start playing. If first note occurs on any other count, press PLAY/PAUSE to begin recording and count the rests until the part begins.
8. Press STOP when you're done recording part and press EXIT to close the warning window.
9. Repeat steps 4-9 for additional parts.
10. Press PLAY/PAUSE to playback your song.

Saving Your Recorded Song

1. Press the SONG SELECT button.
2. Using TAB < or >, select the USER (for internal memory) or the USB button (for external disk drive, USB thumb drive, other USB storage device) at the top of the display screen. **Note:** USB device must be connected to save a song.
3. Press button 6▼ (down arrow) which is below the word Save.
4. Using buttons 1-7 ▲ and ▼, enter the title for your song.
5. When the title is complete, press 8▲ to save the song (underneath the word OK).
6. When completed, press DIRECT ACCESS then EXIT to return to main screen.