



©2008 Yamaha Corporation. All rights reserved.

Song Selection/Playback on Clavinova CVP400 Series

Basic Operation

1. Choose from one of the following areas:
 - A. Press SONG SELECT on right side panel (for preset Yamaha songs).
 - B. Press USB at the top right of the display (for songs from a memory device connected to CVP).
 - C. Press the USER button at the top right side of the display area (for songs saved to internal memory).
2. If you selected USB or USER, press button A (on left side of display area) for Song.
3. Press the corresponding letter, A-J, that's next to the desired song.
4. To play the song, press the PLAY/PAUSE button on the right side panel.
5. To pause playback, press the PLAY/PAUSE button. To resume playback, press the same button.
6. To stop playback and return to the beginning, press the STOP button on the right panel.

Transpose, Balance, Begin Playback Selecting Specific Measures

1. To transpose the song playback, press the TRANSPOSE + or – button. The CVP transposes in half steps. To return to standard, simultaneously press both TRANSPOSE + and – buttons.
2. To balance the volume of the song playback with the keyboard volume, press DIRECT ACCESS then the EXIT button (on the right side of the display area).
3. Use button 1▲ or 1▼ to increase or decrease the song playback volume. (You can hold the button down to scroll quickly).
4. To start song playback at a specific measure, press FF (on the right side panel) to move ahead in the music and REW to go backwards. A small box, with the measure number, will appear in the screen. To hide the box, press the EXIT button once.

Muting Parts*

1. To mute the right hand part, turn off TRACK 1 (R) button (located on the right side panel).
2. To mute the left hand part, turn off the TRACK 2 (L) button.
3. To mute all backup tracks, turn off the EXTRATRACKS button.

*If pressing the TRACK 1, TRACK 2, and EXTRATRACKS buttons does not turn off desired parts, press the CHANNEL ON/OFF button (at the bottom left of the display area). The display should show 16 boxes that correspond to the 16 tracks. If it shows the style tracks, press the button again. Next, turn off the track desired by pressing the button below the track number. Example: To turn off track 3, press button 3▲. To turn off percussion on track 10, press button 2▼.