



©2000 Yamaha Corporation. All rights reserved.

Voice Selection on Clavinova CVP 400 Series

If you select a voice and it is not heard on the Clavinova when you play the keys, press the PIANO RESET button and follow the directions below:

Basic Operation

1. Press a voice category button. (On the right panel area, i.e. PIANO, BRASS, or ORGAN FLUTES)
2. Choose a voice by pressing one of the A-J buttons beside the display (next to instrument desired).
3. To select a different Clavinova voice, repeat the process.

If you want more choices, spin the dial and watch the screen. A small box will appear around the instrument names as you spin the DIAL. Once the box is around the instrument desired, press the ENTER button just below the dial to highlight the box.

Select XG or GM Voices

1. Press PIANO voice category button (right panel area).
2. Press button number 8▲ (up arrow) located at bottom of the display area. (Below the icon of a folder with an up arrow)
3. Spin the DIAL to place the box around XG GM and press ENTER.
4. Spin the DIAL to place the box around the voice category desired and press ENTER.
5. Spin the DIAL to place the box around voice desired and press ENTER to highlight voice.