



Multi Track Recording for the Clavinova CVP-705 and CVP-709

Select voice for Channel 1

Press “Record” in the “Song Control” area

“New Midi” will be greyed out in the screen – this means it’s selected

Press the > arrow next to Channel in the display to open the 16 tracks

Press “Right” at the bottom of the screen

Turn on the metronome

Begin to play

When finished press “Stop” in the Song Control area

To hear back what you have recorded, press “Play” in the Song Control area

Be sure to press Stop before adding the 2nd channel

For Channel 2

Select a voice

Press “Record” in the Song Control area

Press “Left” at the bottom of the screen

Turn on the metronome

Begin to play. As soon as you begin to play, you will hear the first track recorded playing with you

When finished press “Stop” in the Song Control area

For Channel 3

Select a voice for Channel 3

Press “Record” in the Song Control area

Press the box below the left part of the screen that says “Main”

Use the dropdown box to select channel 3


Press OK

Turn on the metronome

Begin to play. As soon as you begin to play, you will hear the first track recorded playing with you

When finished press “Stop” in the Song Control area

Continue until you have recorded as many channels as you’d like, up to 16 channels

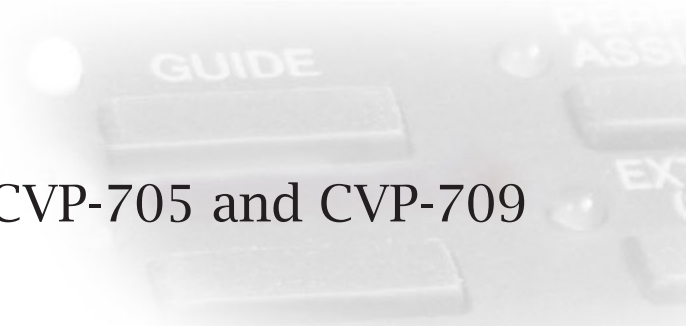



Multi Track Recording for the Clavinova CVP-705 and CVP-709

If a channel starts after beat one, after preparing a channel as above, press "Play" in the "Song Control".

Begin to play at the appropriate time.

When finished press "Stop" in the Song Control area

To save your performance:

From the Home Screen, press the upload icon in the song area of the display

Select either User or USB to store your song

Once the location has been selected, press "Save here" from the display

Hold down the "Delete" button in the display to empty out the title bar

Use the QWERTY keys in the display to name your song

Press "OK" when complete.